
LATERAL CLEAN-OUT ASSEMBLY

Landscape box must be large enough to access end cap for removal, and extend to top of rock so effluent can drain during flushing.

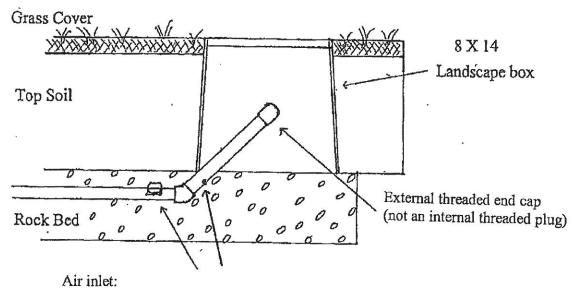

Last perforation is on top of pipe with an orifice shield, or on under-side of upper pipe as shown.
Use a 45, 2-45's, or a long sweep 90, but no hard 90's.



1-450



2-450



Long

Flex
pipe

clean of the tripped of tripped of the tripped of tripped o

Last perforation on top w/orifice shield



